



## ORCAL ASTOR 125 (Euro 3)

### Engine guard mounting instructions

**Upper part:** The engine guard is attached on the upper anchorage of the two of them which connect the engine mounting plate to the frame tube. Use the **M8x90** screw, nut and washers included in the **SPAAN** kit.

**Lower part:** It is attached at the anchorage that the engine mounting plate carries at its bottom part, where the engine is directly anchored. Use the **M8x90** screw, nut and washers included in the **SPAAN** kit.

The upper plate of the engine guard, on the right side, has a half-moon groove to allow the clutch cable to pass through.

