




YAMAHA VIRAGO 535 <'99 (Turn lights under the rear seat end)

SISSYBAR ASSEMBLY INSTRUCTIONS

(1) Sideplates

- A) Remove the helmet lock located on the left side of the rear fender.
- B) Remove the trims that cover the upper part of the shock absorbers.
- C) Remove the screws that fix the upper part of the shock absorbers. Remove the shock absorber from its anchor, insert the front part of the side plates into the shock absorber support stem. Place the shock absorbers, put the **14x4x8** bushings and fix with the **M8x20** screws that come in the kit.
- D) Remove the rear indicators. The cables must first be disconnected at a faston junction located under the seat. Under the fender, the cables are guided by metal plates that can be easily opened to better remove the cables.
- E) Fix the Spaan side plates in their central hole to the turn light anchor, as shown in the diagram. The indicators will be transferred to the hole that the side plates carry on their rear.
- F) Fix the sissybar arch to the side plates, with the four **M6x20** screws. Put the **M6** nuts on the inside. In case of mounting the grill, use these same screws, and fix it with the **M6** nuts.
- G) Tighten all the hardware. Fix the helmet lock on the left plate, in the place provided for it. Connect the indicator cables.
- H) A groove must be made in the trims that cover the shock absorbers. Position them to mark the spot and make those grooves. Place them and tighten the screws that fix them.

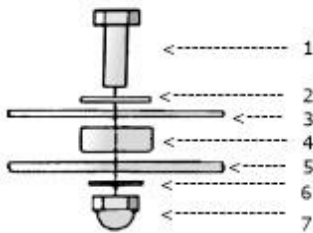

- | |
|---------------|
| 1- Screw |
| 2- washer |
| 3- Fender |
| 4- washer |
| 5- Side plate |
| 6- Washer |
| 7- Nut |

(2) Sissybar uprights – luggage rack arch

Fix the sissybar upright (high or low), or in case of a luggage rack or luggage rack TC, the luggage rack arch to the sideplates **SPAAN** with the four screws **M6x20**. Put **M6** nuts from the inside.

(3) Rack

For installation in luggage racks kits or in any sissybars of our brand **SPAAN**. We must place it the inside of the small arch or the sissybar uprights and fix the assembly with the 4 screws **M6x20** and nuts **M6** included in the original kit. **In all LUGGAGE RACKS is required to mount the luggage rack arch, to give more rigidity to the assembly.**



(4) Pad

Join the set with four screws **M5x10** that accompany the kit. (In the back of the pad is marked with four holes in the fabric the position of the threads).

