

# SPAAN

MADE IN  
SPAIN

## SUZUKI INTRUDER C1500T


### INSTALLATION INSTRUCTIONS SISSYBAR SPAAN

The side fixing plates are placed sissybar SPAAN between the fender and fender subframe supporting, support bags and suitcases. For installation, follow these steps:

- Remove the bags. Are fixed from the inside by four Allen head screws drop fat. Allen wrench 5. (Picture 1)
- Removing the case is exposed frame support it. There it apart by removing the four hex head screws (key 12) that secure (Picture 2)




(Picture 1)

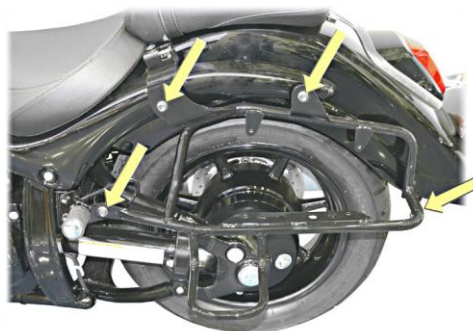

(Picture 2)



(Picture 3)

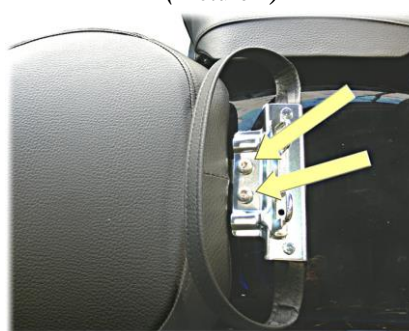

(Picture 4)



(Picture 5)

- Remove the passenger seat. Remove the screw that secures the fender and move back. (Allen key 6). (Picture 3)

- Remove the two screws securing the front seat. (Allen key 6) Remove the connector and remove the seat sliding back. (Picture 4)

- Remove the side trim. It is secured with two Allen screws. (Allen key 8). (Picture 5)

- Remove the screw that secures the side subframe (Allen key 8) (Picture 6)



(Picture 6)

- Remove the fender subframe. Remove the washers carrying the two lugs subframe supporting the fender. Place right side of the sissybar lugs SPAAN with folding toward the center of the bike.
- Place the fender in place by inserting the pins in the subframe. Position the subframe to its original position and tighten the screw that secures it.
- Place the bezel and side support frame suitcase firmly establish these elements.
- Initial disassembly across the bike following the steps in the instructions, except the removal of the seat as we have already removed.

**IMPORTANT! Do not remove both sides at the same time to prevent the fender and inner frame is off-hook.**



(Picture 7)



(Picture 8)

- - Once placed side, set them sissybar SPAAN bow, using the four M6x20 screws attached to the kit. Put M6 nuts on the inside. When assembling the grill, use these screws and fasten with M6 nuts. (Picture 7)
  - After the previous assembly, place the two seats and two suitcases.
  - Laying pad: Put the pad in front of the arch support. On the back of the sissybar place the chrome piece with four holes, pinning the sissybar tube between it and the pad. About this work place the plate with the logo SPAAN. Merge all the four accompanying the kit SPAAN Allen screws M5x10. (On the back pad are marked with four holes in the fabric the position of the threads). (Picture 8)
- Maximum load on the grid: 4.5 kg (10 lbs.)