




KAWASAKI VN 1700 VOYAGER CUSTOM KAWASAKI VULCAN 1700 VAQUERO ASSEMBLY SISSYBAR

Sissybar side plates are placed between the panniers and the bike frame in the same anchors that are attached bags.

ASSEMBLY: Open the suitcase. On the domestic side of the case may be four screws. Remove the two screws that anchor the top of the bag to the rack. (*image 1*)



(*image 1*)

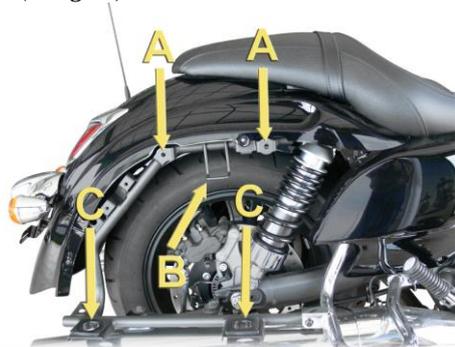


(*image 2*)

- Remove the bag of the bike. To do this, once removed the screws to pull the bag up. It is embedded in the side of the bike by a central coupling ("B" in Figure 2) and at the bottom by two pins that fit into two rubber silentblocks placed at the base of support of the case. ("C" in *image 2*).

- Remove the central hitch suitcase, placed on the back of it. It is attached with two screws. (*image 3*)



(*image 3*)

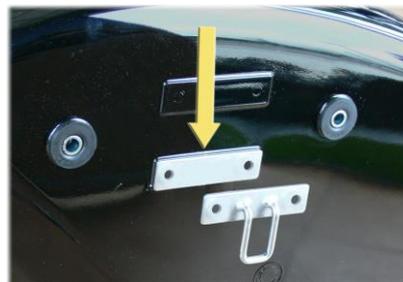

(*image 4*)

- Place between the central coupling and suitcase, supplement deck kit which has the same shape as the base of the central hitch. (Picture 4) Fix the central coupling to the case using screws M6x20 kit. Inside the suitcase put the grower washers and flat washers and out using the self-locking nuts M6 kit.

- Place the bag in place by fitting pins in the lower silent blocks and the central hook into its housing.

- Separate suitcase rack slightly, pulling it out sideways. Position the side plates of sissybar between the suitcase and the frame (Figure 5)



(*image 5*)



(*image 6*)

Match the two lower holes in the side plates with two holes anchor bag and threaded anchors the frame. ("A" in Figure 2).

Secure the assembly with screws M8x30 kit and flat washers.

- Set the arch of the back to the side plates, with the four screws M6x20. Put M6 nuts on the inside. When installing the grill, use these same screws and secure with nuts M6.

- **Place the pad (Figure 6)**

Put the pad in front of arch support. On the back of the sissybar place the chrome plate with four holes, trapping the backrest tube between it and the pad. In the center of the plate place the anagram SPAAN. Attach the set with the four Allen screws M5x10 accompanying the kit. (On the back pad it is marked with four holes in the fabric threads position).

