

(1) <u>Sideplates</u>

- [Image 1] Remove the center cap of the side supports of the rear fender. It is fixed with two screws. (Allen key 4).


- *[Image 2]* Remove the screws indicated in the picture. Front hexagon-head screw (key 14). Rear hexagon-head screw (key 12).

- [Image 3] Put the caps included in the SPAAN kit, in place of these screws.

Put the Ø10 Ø20x13 cap ahead, in the A position.

Put the cap $\emptyset 20x14x\emptyset 8$ behind in the **B** position.

- [Image 4] Place the side plate of the SPAAN sissybar on the caps, securing it with screws included in the SPAAN kit, M10/125x50 ahead and M8x30 behind.

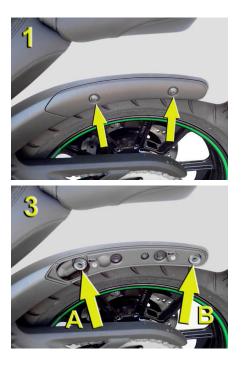



(2) <u>Sissybar uprights – luggage rack arch</u>

- *[Image5]* Fix the sissybar upright (standard or low), or in case of a luggage rack, the luggage rack arch to the sideplates **SPAAN** with the four screws **M6x20**. Put **M6** nuts from the inside.



(3) <u>Rack</u>

For installation in luggage racks kits or in any sissybars of our brand **SPAAN**. We must place it the inside of the small arch or the sissybar uprights and fix the assembly with the 4 screws **M6x20** and nuts **M6** included in the original kit. **In all LUGGAGE RACKS is required to mount the luggage rack arch**, to give more rigidity to the assembly.



Join the set with four screws M5x10 that accompany the kit. (In the back of the pad is marked with four holes in the fabric the position of the threads).



