




Highway bar mounting instructions

Motorcycle with engine cover

- **Top:** The highway bar must be fixed in the anchorage of the frame marked with arrow in the image. The **M8x90** screw and a **20x8x8.5** bushing will be used. The bushing must be placed on the right side of the highway bar between the chassis and the plate. Fix with the nut included in the kit.
- **Bottom:** The bottom part of the engine protector is fixed to the sump cover anchor indicated with the arrow in the image and the original screw will be used for this.

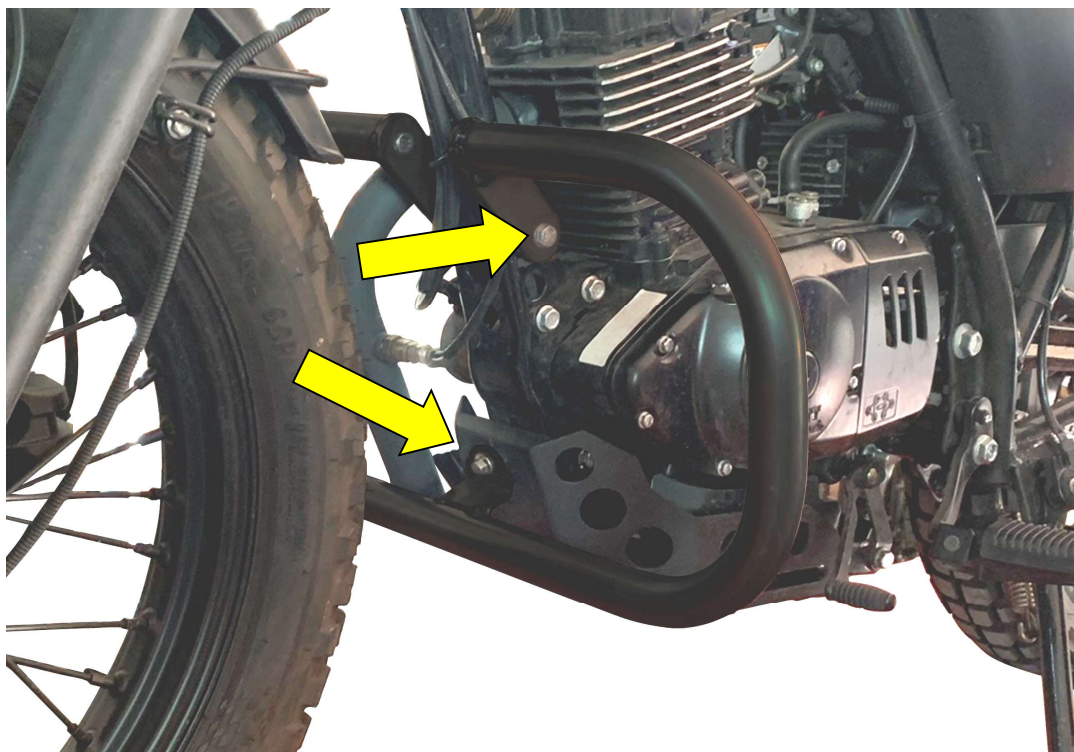

Motorcycle without engine cover

- **Top:** The item plate must be fixed in the anchorage of the frame marked with arrow in the image. The **M8x80** screw and the **M8** nut from the kit will be used for this.
- **Bottom:** It is fixed to the frame anchor indicated with arrow in the image. The **M8x110** screw and the **M8** nut from the kit will be used for this.

